




Reliance Industries, LLC

Operating instructions

for

HLL Anchor Clamp with Footrest

Model # 3092

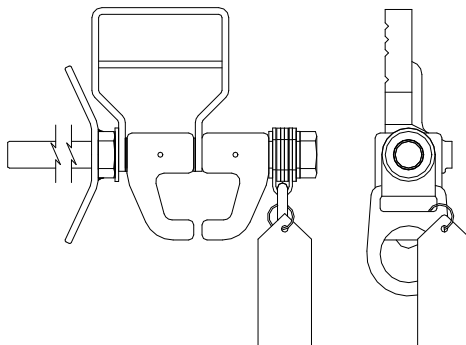

Reliance Industries, LLC

PO Box 140008

Denver, CO 80214

Ph. (800) 488-5751

Ph. (303) 424-8650

Fax (303) 424-8670

User Instructions

3092 HLL Anchor Clamp with Footrest



Reliance Industries, LLC

General Instructions

It is the responsibility of the employer, as part of a total fall arrest rescue and evacuation program, to retain the manufacturer's instructions and make them readily available to all users. The employer must provide adequate training in the proper use and care of this product prior to use.

Manufacturer's name and address

Reliance Industries, LLC
PO Box 140008
Denver, CO 80214
USA

Tel.: (303) 424-8650

Fax: (303) 424-8670

Part number and model designation

Model type: HLL Anchor Clamp with Footrest

Part number: Model # 3092

Proof Load: 12,000 lbs in-line pull on D-ring
5,000 lbs fall arrest load ring

Rated capacity: 310 lbs (141 kg), 1 person (personnel)

Range: I-beam flange width range 4.00-in. min. to 16-5/8-in. maximum with
beam flange thickness from .5-in. to 1.75-in.

Do not use on beams with a flange thickness of 1/2-in. (1.27 cm) or less or of a width and thickness insufficient to hold the intended load. Consult a qualified person prior to use.

Material: High strength steel. Zinc plated with yellow chromate

Caution: Always certify, using a qualified person, that the beam to which the Anchor Clamp is being attached will carry the intended loads per OSHA and ANSI standards. For personal use with shock absorbing lanyard or a retractables designed for personal fall arrest with a 900 lbs max. arrest force. The anchorage must be capable of sustaining a load of 5,000 lbs. (for personal fall arrest) or twice the anticipated final line tension when used for horizontal lifelines. When attaching a lifeline to the eye, always be sure that the lifeline is inline with the bolt axis and that the lifeline is designed so that anticipated cable tensions do not exceed 6,000 lbs.

User Instructions

3092 HLL Anchor Clamp with Footrest



Intended use and purpose of the equipment

The HLL Anchor Clamp with Footrest is an anchorage connector intended for use only for connection to I-beams with rigid flanges. An anchorage is a secure means of attachment to which the personal fall arrest system is connected. Anchorage connectors are components with means specifically intended for coupling a personal fall arrest system to an overhead anchorage. The Anchor Clamp provides a Footrest for work positioning or climbing, a swivel ring for a single person fall arrest attachment point, as well as an inline Skyline Horizontal Lifeline (HLL) attachment point, and a handle for easy attachment. The footrest is NOT to be side-loaded or used as a fall arrest attachment point.

Proper method of use

The HLL Anchor Clamp is designed as a portable anchorage that can be temporarily installed to a structural I-beam to provide a rigid anchorage for fall arrest for one person only or as an anchorage for an HLL system. It can be attached to the following structures of an I-beam when properly torqued:

- Top or bottom flanges of horizontal, vertical or angled I-beams.

This system consists of a Anchor Clamp with an integral swing ring for use as an anchorage point for locking snaphooks or carabiners or swaged cable ends. The footrest may be used as a footrest, or as a hand-hold. **DO NOT use the Footrest as a fall attachment point.** Use only the swivel ring as a fall arrest attachment point. The beam grip has a gate opening to fit onto I-beam flanges in the range from

- 4.00-in. min.
- 16-5/8-in maximum
- .5-in. to 1.75-in. flange thickness

To attach the Beam Grip, loosen the hand-knob to desired width, slip over the I-beam flange as shown in Figure 1 and tighten the hand-knob as tight as possible by hand. A torque of 40-ft-lbs. generates enough clamping force to hold clamp in place. Check tightness again prior to each use. Use caution when standing on the footrest not to step on, stand on, or twist the hand knob or threaded rod.

Caution !

User Instructions

3092 HLL Anchor Clamp with Footrest



- Use only with the Skyline HLL system using 3/8-7 x 19 steel cable and the Skyline Shock Absorber pre-tensioned to 1000 lbf.
- Use only with HLL systems in which the anticipated maximum line tension does not exceed 6000 lbf.
- Do not use footrest as a fall attachment point.
- Do not replace factory supplied bolt with any substitute.
- The beam grip swivel ring can be loaded in any direction in which the eye swivels.
- Use only in the supplied configuration as shown in Fig. 1.
- Do not install on open ended I-beam or structure.
- Do not use with non-locking snaphooks. Use only in conjunction with Personal Fall Arrest Systems, including shock absorbing lanyards or retractables and a full body harness.
- Do not install in corrosive environments that will cause degradation or corrosion of steel or zinc plated components.
- Do not use when the danger of lightning strike exists.
- Do not install or use near electrical hazards.
- Do not install this anchor clamp at elevations that will allow the worker to strike a lower level or objects that are below him in case of a fall, or at such an elevation that will subject a worker to a free-fall of more than 6-ft..
- Do not tie off to the swivel ring when standing on the footrest of the same clamp. This will create a 12 ft. freefall. Instead, use an additional anchor clamp above the worker.

This product should be used only according with these instructions and in accordance with all state, federal and local safety regulations. The worker must read, heed and understand all warnings and instructions called out in the labels and operating instructions prior to use. Any hazards to safe and proper operation must be eliminated prior to use.

When used as a personal fall arrest anchorage only, the anchorages and attachment components must be able to withstand a sustained force of 5000 Lbs. Anchorages selected for PFAS shall have a strength capable of sustaining static loads, applied in the directions permitted by the

User Instructions

3092 HLL Anchor Clamp with Footrest



PFAS, of at least: a) 3,600 pounds (16 kN) when certification exists, or b) 5,000 pounds (22.2 kN) in the absence of certification.

The manufacturer is not responsible for damages resulting from an improper application or use of this product. Proper application also means considering the operating instructions, workplace geometry, workplace hazards and the conditions of inspection and maintenance.

The user must have a rescue plan, be trained in the use of this plan and the means at hand to implement it when using this equipment.

Damaged products and products having already been used for arresting a fall must be removed from service.

Whenever the structure to which this anchor clamp is attached is altered the suitability of the anchor clamp as an anchorage must be recertified by a qualified person. Periodic inspections should be conducted by this qualified person at least once yearly.

Always use a qualified person or trained engineer to determine if the structure to which the anchor clamp is attached, is of sufficient strength to support the anticipated loads whether that is 5000 lbs through the swivel eye for a personal fall arrest anchorage or 10000 lbs axially through the fixed eye for a horizontal lifeline anchorage.

Always use this product only with shock absorbing lanyards or SRLs attached only to the dorsal d-ring of the workers harness.

When using this anchor clamp for a personal fall arrest anchorage, always install the clamp at an elevation at least as high or higher than the worker's dorsal d-ring to limit freefall to 6 ft. or less, per OSHA requirements.

This product is qualified for use as a personal fall arrest anchorage only with Force Factor I shock absorbers, and only when the freefall is limited to 6 ft. or less. Use only with locking snap hooks.



Warnings

- **Do not alter or attempt to repair the equipment.**
- **Use equipment for intended purpose only.**
- **Do not use combinations of components or subsystems, or both, which may affect or interfere with the safe function of each other.**
- **Do not expose equipment to chemicals which may produce a harmful effect. Consult the manufacturer in cases of doubt.**

User Instructions

3092 HLL Anchor Clamp with Footrest



Reliance Industries, LLC

- **Do not use equipment around moving machinery and electrical hazards. Do not use equipment near sharp edges and abrasive surfaces. Avoid exposure to physical and chemical hazards which the product is not designed to withstand.**
- **Make only compatible connections. This product may only be used in connection with a safety harness as per ANSI Z359.1 and ANSI A1014. This product is designed for single person usage in conjunction with a full body harness and compatible anchorage devices. Only approved safety devices that comply with ANSI Z359.1 and OSHA regulations may be used with this product.**
- **Only suitable anchorage devices in accordance with ANSI Z359.1 may be used. Anchorages selected for personal fall arrest systems (PFAS) shall have a strength capable of sustaining static loads, applied in the directions permitted by the PFAS, of at least: (a) 3,600 pounds (16 kN) when certification exists, or (b) 5,000 pounds (22.2 kN) in the absence of certification.**
- **Anchorage connectors shall be attached to no more than one personal fall arrest system unless certified for such purpose.**
- **Follow all limitations to the use of this anchor clamp as outlined in the section “Proper Method of Use.”**


User Instructions

3092 HLL Anchor Clamp with Footrest



HLL Anchor Clamp with Footrest Model # 3092

Permissible installation configurations when used as a personal fall arrest anchorage.

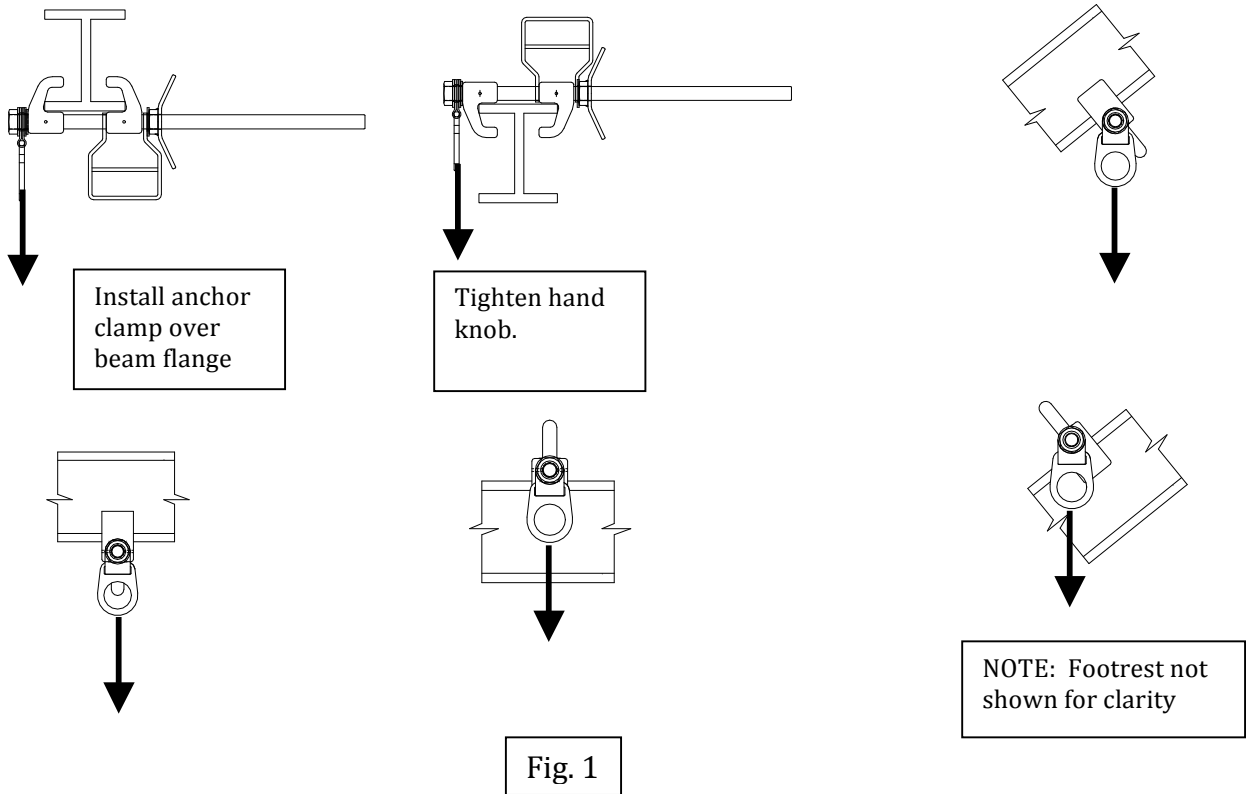


User Instructions
3092 HLL Anchor Clamp with Footrest




HLL Anchor Clamp with Footrest Model # 3092


Permissible methods of attachment when used as a horizontal lifeline anchorage,

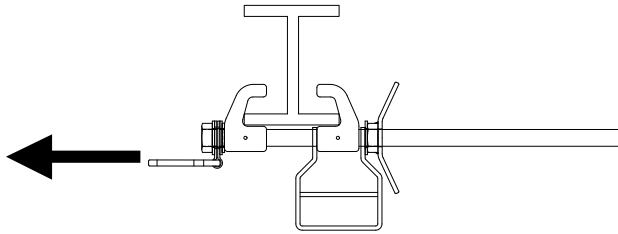


Permissible methods of attachment when used as a personal fall arrest anchorage,

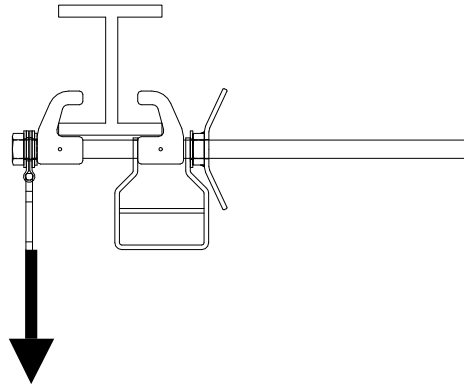

The following attachments ARE NOT ALLOWED and could result in SERIOUS INJURY or DEATH.:

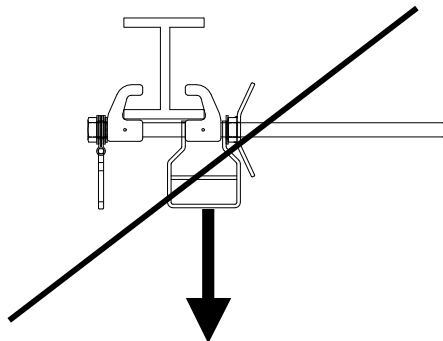

NOT PERMITTED!

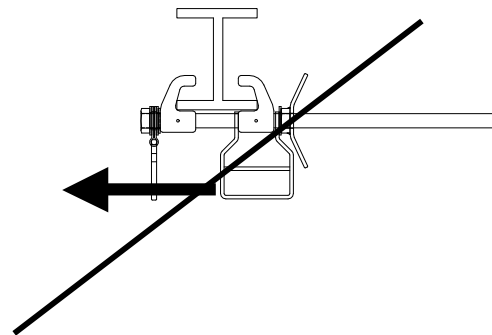

NOT PERMITTED!

User Instructions

3092 HLL Anchor Clamp with Footrest



Inspection, Maintenance and Storage

The user of this product is responsible for the execution of inspection, maintenance and possible repairs. The user shall inspect equipment before each use to ensure that the equipment is in serviceable condition and operating correctly.

A yearly inspection of this product should be performed by a qualified person capable of determining the suitability for use.

In addition to this, the product must be checked for possible damages after any fall arrest load has been applied and is to be examined by an expert who must then decide if the product is suitable for further use.

The user must remove equipment from field service that has been subjected to a fall arrest. An authorized inspection is then required to determine if the product is suitable for further use.

When any inspection reveals defects in, damage to, or inadequate maintenance of equipment, the equipment shall be tagged as "UNUSABLE" and be permanently removed from service or undergo adequate corrective maintenance by means of an authorized inspection before return to service.

Most common defects are for example:

- Loose locking nut
- Absence of any elements affecting the equipment form, fit or function
- Evidence of defects in or damage to hardware elements including cracks, sharp edges, deformation, corrosion, chemical attack, excessive heating, alteration and excessive wear
- Missing or unreadable labels and warnings
- Improper attachment to beam for intended use

Prior to installation equipment shall be stored in a cool, dry and clean place away from direct sunlight in a manner as to preclude damage from environmental factors such as heat, light, excessive moisture, oil, chemicals and their vapors or other degrading elements.

Cleaning

Product may be cleaned with soap and water or solvents that do not contain chlorine or chemicals corrosive to steel or zinc.

User Instructions
3092 HLL Anchor Clamp with Footrest



Formal Inspection

Buyer/client:

Product description: HLL Anchor Clamp w/Footrest Model No. 3092

Year of manufacture:

Date of purchase:

Date of first use:

Name of user:

This formal inspection grid and log has to be filed at the buyers department of occupational health and safety and is to be sent along with the product for the annual formal inspection through a competent person. Only completely inspected products are subject of the product warranty and liability of the distributor and manufacturer.

Inspected according to specifications outlined by manufacturer:

By:	Date:	By:	Date:
Stamp	Signature	Stamp	Signature
By:	Date:	By:	Date:
Stamp	Signature	Stamp	Signature
By:	Date:	By:	Date:
Stamp	Signature	Stamp	Signature

The inspector confirms with his signature the compliance of his inspection with all specifications as outlined by the manufacturer and as required by standards and regulations pertaining to occupational health and safety and fall protection.

User Instructions
3092 HLL Anchor Clamp with Footrest



Checklist

HLL Anchor Clamp Model No.: 3092

	1. Year	2. Year	3. Year	4. Year	5. Year	6. Year
	Date	Date	Date	Date	Date	Date
By a qualified person:	Inspector	Inspector	Inspector	Inspector	Inspector	Inspector

Beam Grip:

No missing parts						
No Corrosion						
No deformation						
Functioning condition						
No changes to attachment structure						

© Copyright by Reliance Industries, LLC - Excerpts and duplication of this formal inspection grid and log only with prior consent